

# Computer Networks-Lab 01



## Instructor: Engr. Khuram Shahzad CL30001 – Computer Networks-Lab

**SEMESTER Summer 2022** 

### **Computer Networks - Lab 01**

#### **OBJECTIVES OF THE LAB**

Following topics will be covered in this lab

- Gather information including connection, host name, Layer 2 MAC address and Layer 3 TCP/IP network address information.
- Compare network information to other PCs on the network.
- Identify tool used for discovering a computer's network configuration.
- Understand basic network information & configuration from computer through ipconfig/ifconfig and ns lookup commands.
- Introduction with Network adapter and its working.
- Perform some network adapter operations using ipconfig/ifconfig.
- Find the IP of a system with 8 different methods.



### Table of Contents

omp	uter Networks - Lab 01	0
OBJ	IECTIVES OF THE LAB	0
• net	Gather information including connection, host name, Layer 2 MAC address and Layer 3 TCP/I work address information.	
•	Compare network information to other PCs on the network.	0
•	Identify tool used for discovering a computer's network configuration.	0
• and	Understand basic network information & configuration from computer through ipconfig/ifcon	_
•	Introduction with Network adapter and its working	0
•	Perform some network adapter operations using ipconfig/ifconfig.	0
•	Find the IP of a system with 8 different methods	0
1.	Overview	3
2.	How to Open Command Prompt	3
4.	Ipconfig Syntax	3
I	pconfig Parameters	4
5.	Example Usage	4
6.	ipconfig - Retrieve Basic TCP/IP Network Information	4
7.	ipconfig /all - Retrieve All TCP/IP Network Information	5
8.	ipconfig /release - Releases the IPv4 Address of All Network Adapters	8
9.	ipconfig /release6 - Releases the IPv6 Address of All Network Adapters	9
10.	ipconfig /renew - Get a New IPv4 Address for All Network Adapters	10
11. Vie	ipconfig /renew6 - Get a New IPv6 Address for All Network Adaptersipconfig /displaydns - w DNS Cache	11
12.	ipconfig /renew <adapter> - Get a New IPv4 Address For a Specific Network Adapter</adapter>	11
13. Cor	ipconfig /all   findstr /v 00-00-00   findstr Physical - Display MAC Address of Only Physical nnected Network Adapters	12
14.	ipconfig /displaydns - View DNS Cache	13
15.	ipconfig /flushdns - Purge DNS Cache	15
16.	Other Usages and Getting Help	15
17.	Redirect Output to Text File	17
18.	NS LookUp	18

3 way	s to find your IP address in Windows (all versions)	19
1.	How to find your IP address from the Command Prompt (all versions of Windows)	19
2.	How to find your IP address in the Settings app (Windows 10 only)	21
4.	How to find your IP address in System Information (all versions of Windows)	28
5.	How to find the IP address in PowerShell (all versions of Windows)	29
6.	How to find your IP address in Task Manager (Windows 10 and Windows 8.1 only)	30
7.	How to find your computer's IP address using the Network Map (Windows 7 only)	31



#### PC Network TCP/IP Configuration

#### 1. Overview


The ipconfig is a Windows command-line utility used often to troubleshooting computer network issues. If you are a Linux user, this utility is similar to ifconfig. This is often used to determine the local IP address, subnet mask, the gateway address, and other network configuration of a computer. Additionally, this tool is used to refresh DHCP (Dynamic Host Configuration Protocol) and DNS (Domain Name System) settings


While most of the information provided by the ipconfig command-line utility can be found via a more user-friendly graphical interface, sometimes that interface may not be available and command prompt is your only available option. If you are a help desk technician or a network

professional, it is recommended that you understand the command-line method of retrieving a computer's network configuration, and it some cases, performing network functions.

#### 2. How to Open Command Prompt

- 1. Search for cmd using the built-in Windows search tool.
- 2. Right-click on the Start icon and select Command Prompt.
- 3. Press the keyboard combination  $\frac{\text{WinKey} + \mathbf{R}}{\text{NinKey}}$ , then type cmd at the *Run* window that appears.

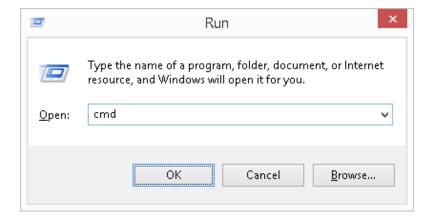

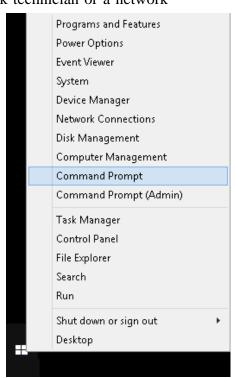

#### 4. Ipconfig Syntax

ipconfig [/allcompartments] [/all] [/renew [<Adapter>]] [/release [<Adapter>]] [/renew6[<Adapter>]] [/release6 [<Adapter>]] [/flushdns] [/displaydns] [/registerdns] [/showclassid <Adapter>] [/setclassid <Adapter> [<ClassID>]]>



#### **Ipconfig Parameters**

Parameter	Description
/all	Display the full TCP/IP configuration information for all network adapters.
/release	Release the IPv4 address for the specified adapter.
/release6	Release the IPv6 address for the specified adapter.
/renew	Renew the IPv4 address for the specified adapter.
/renew6	Renew the IPv6 address for the specified adapter.
/flushdns	Purges the DNS Resolver cache.
/registerdns	Refreshes all DHCP leases and re-registers DNS names.
/displaydns	Display the contents of the DNS Resolver Cache.
/showclassid	Displays all the DHCP class IDs allowed for adapter.
/setclassid	Modifies the DHCP class ID.
/showclassid6	Displays all the IPv6 DHCP class IDs allowed for adapter.
/setclassid6	Modifies the IPv6 DHCP class ID.
/?	Displays help information.

#### 5. Example Usage

There are a variety of switches (sub commands) available with the ipconfig utility that will either display certain information or perform certain network functions. At the most basic, the ipconfig displays a computer's IP address, subnet mask and the default gateway (which is typically the IP address of your router or network firewall).

#### 6. ipconfig - Retrieve Basic TCP/IP Network Information

To get basic network information from your computer, type the following in the command window then press Enter:: ipconfig

The screenshot example below is the ipconfig output of a particular computer. The output of your ipconfig result will differ depending on your network setup and the type of network adapters installed on your computer. In our screenshot example, it shows the following basic networking information about the computer from which ipconfig was ran.

IPv4 address: 192.168.0.98

• Network subnet mask: 255.255.255.0

• Default Gateway: 192.168.0.1

Please note that unless your computer is connected directly to the Internet (this is rare), the IP address reported by ipconfig will be your local network IP, not your public external IP address.



While other network details can be retrieved by the ipconfig utility, for most network troubleshooting, this is what is typically needed.

```
Command Prompt
                                                                                 C:>ipconfig
Windows IP Configuration
Wireless LAN adapter Local Area Connection* 2:
  Media State . . . . . . . . : Media disconnected
  Connection-specific DNS Suffix .:
Wireless LAN adapter Local Area Connection* 3:
                           . . . : Media disconnected
  Media State . . . . . . . .
  Connection-specific DNS Suffix . :
Wireless LAN adapter Wi-Fi:
  Connection-specific DNS Suffix . : hitronhub.home
  IPv6 Address. . . . . . . . . : 2607:fea8:3d20:949::2a
  IPv6 Address. . . . . . . . . : fd00:6477:7d99:6612:fd03:b57e:3676:2037
  Temporary IPv6 Address. . . . . : 2607:fea8:3d20:949:ad4f:576c:5f2b:b1f0
  Temporary IPv6 Address. . . . . : fd00:6477:7d99:6612:ad4f:576c:5f2b:b1f0
  Link-local IPv6 Address . . . . : fe80::fd03:b57e:3676:2037%8
  IPv4 Address. . . . . . . . . : 192.168.0.98
  Default Gateway . . . . . . . : fe80::6677:7dff:fe99:6612%8
                                  192.168.0.1
Ethernet adapter Bluetooth Network Connection:
  Media State . . . . . . . . . : Media disconnected Connection-specific DNS Suffix . :
```

#### 7. ipconfig /all - Retrieve All TCP/IP Network Information

Another useful switch with ipconfig is to have it report all TCP/IP network details for all network adapters on a computer. This is accomplished by using the /all switch. This switch provides you with the same basic information as ipconfig described above, but with a lot more detail. To retrieve all network information about your computer, type the following in the command window then press Enter: ipconfig /all

This will show a detailed report of various network details for the computer. Again, your report will differ depending on your network setup and the network adapters installed on your computer. This report includes information such as:

- Make and model of your network adapter(s)
- Physical address (also known as the MAC address or hardware address) of your adapter(s)
- Whether your IP address is leased (i.e., DHCP issued or statically assigned)
- If IP address is leased, what the lease expiration and the DHCP that leased it



#### DNS servers

As you can see, ipconfig /all provides you with a plethora of details about your computer network setup.

```
Command Prompt
                                                                                     \times
Windows IP Configuration
                   . . . . . . . : DESKTOP-UV8IV07
  Host Name . .
  Primary Dns Suffix . . . . :
Node Type . . . . . : Hybrid
  IP Routing Enabled. . . . . . : No
  WINS Proxy Enabled. . . . . . : No
  DNS Suffix Search List. . . . . : hitronhub.home
Wireless LAN adapter Local Area Connection* 2:
                              . . : Media disconnected
  Media State . .
  Connection-specific DNS Suffix .:
  Description . . . . . . . . . : Microsoft Wi-Fi Direct Virtual Adapter
  Physical Address. . . . . . . : DA-FF-28-3C-84-13
  DHCP Enabled. . . . . .
  Autoconfiguration Enabled . . . . : Yes
Wireless LAN adapter Local Area Connection* 3:
                              . . : Media disconnected
  Media State . . . . .
  Connection-specific DNS Suffix . :
  Description . . . . . . . . . : Microsoft Wi-Fi Direct Virtual Adapter #4
  Physical Address. . . . . . . : CA-FF-28-3C-84-13
  DHCP Enabled. . . . .
  Autoconfiguration Enabled . . . . : Yes
Wireless LAN adapter Wi-Fi:
  Connection-specific DNS Suffix . : hitronhub.home
  Description . . . . . . . . : Qualcomm Atheros QCA61x4A Wireless Network Adapter
  Physical Address. . . . . . . : C8-FF-28-3C-84-13
  DHCP Enabled. . . . . . . . . : Yes
  Autoconfiguration Enabled . . . : Yes

IPv6 Address. . . . . . . . : 2607:fea8:3d20:949::2a(Preferred)
  Temporary IPv6 Address. . . . . : fd00:6477:7d99:6612:ad4f:576c:5f2b:b1f0(Preferred)
  Link-local IPv6 Address . . . . : fe80::fd03:b57e:3676:2037%8(Preferred) IPv4 Address . . . . . . : 192.168.0.98(Preferred)
  Lease Expires . . . . . . . . : Tuesday, August 27, 2019 11:31:50 PM
  Default Gateway . . . . . . . :
                                    fe80::6677:7dff:fe99:6612%8
                                    192.168.0.1
  DHCP Server . . . . . . . . . :
                                    192.168.0.1
  DHCPv6 IAID . . . . . . . . . . :
                                    80281384
                                    00-01-00-01-20-F7-C4-6E-C8-FF-28-3C-84-13
  DHCPv6 Client DUID. . . . . . :
  DNS Servers . . . . . . . . . . :
                                    2607:fea8:3d20:949:6677:7dff:fe99:6612
                                    192.168.0.1
                                     2607:fea8:3d20:949:6677:7dff:fe99:6612
  NetBIOS over Tcpip. . . . . . : Enabled
Ethernet adapter Bluetooth Network Connection:
  Media State . . . . . . . . . : Connection-specific DNS Suffix . :
                             . . . : Media disconnected
  Description . . . . . . . . . : Bluetooth Device (Personal Area Network)
  Physical Address. . . . . . . : C8-FF-28-3C-84-14
  DHCP Enabled. . .
  Autoconfiguration Enabled . . . . : Yes
```



The results of IPConfig include the following information:

Physical Address	This is the MAC address for the specified network connection. A computer can have more than one Physical address if it has both Ethernet and wireless
	connections.
Host Name	The name of the computer on the network.
IPv4	The IP address being used by the network connection.
Address	
Subnet	The specific section of the network to which a computer is connected.
Mask	
Default	The router or switch that the network connection goes through.
Gateway	
DHCP	The server that hands out IP addresses based on a DHCP protocol.
Server	
DNS	Domain name servers for your network - these servers translate URLs to an IP address.
Servers	
Connection-	A connection specific DNS suffix is a DNS suffix that is related to a particular network
specific	interface. It can be used in addition to or instead of the Primary DNS suffix when
DNS Suffix	performing DNS queries or DNS dynamic registrations.

#### MAC Address (OUI) Lookup Tool


A MAC address is made up of six (6) octets. The first three octets indicate the manufacturer of the network adapter. Use this <u>MAC Address (OUI) Lookup Tool</u> to find the manufacturer of your adapter.

#### What Does Network Adapter Mean?

A network adapter is the component of a computer's internal hardware that is used for communicating over a network with another computer. It enables a computer to connect with another computer, server or any networking device over an local area network (LAN) connection. A network adapter can be used over a wired or wireless network.

A network adapter is usually the only component within a computer for interfacing or connecting with a network. Typically, it is built on a printed circuit board with jumpers that connect it with the computer's motherboard.



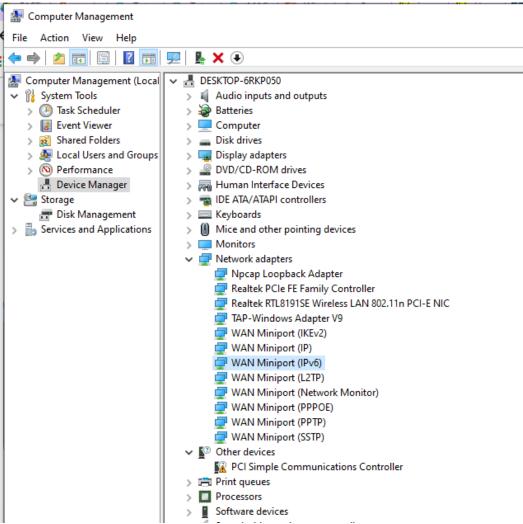

#### 8. ipconfig /release - Releases the IPv4 Address of All Network Adapters

The /release switch will cause ipconfig to go through the network adapters you have and drop the dynamically issued IPv4 address by sending a DHCPRELEASE message to the DHCP server. For the majority of the time, you would follow this command with **ipconfig /renew** (described below) will cause your network adapters to reach out to your DHCP server for an IP address (it can be a new IP address or the same IP you had prior to when you performed the /release command). For most, executing this command does not have adverse effect on your computer.

To release your IP address from your computer, type the following in the command window then press Enter:ipconfig /release



Note, if you have a statically assigned (manually assigned) IP address, this command will not release it. See example ipconfig /renew for related information.

```
C:\Windows\system32\cmd.exe
                                                                                   C:\Users\ks834>ipconfig /release
Windows IP Configuration
No operation can be performed on Local Area Connection while it has its media disconnected.
Unknown adapter Local Area Connection:
  Media State . . . . . . . . : Media disconnected
  Connection-specific DNS Suffix .:
Ethernet adapter Ethernet:
  Media State . . . . . . . . : Media disconnected
  Connection-specific DNS Suffix .:
Ethernet adapter Npcap Loopback Adapter:
  Connection-specific DNS Suffix .:
  Link-local IPv6 Address . . . . : fe80::f0b8:ff94:7803:80f7%7
  Autoconfiguration IPv4 Address. . : 169.254.128.247
  Default Gateway . . . . . . . :
Wireless LAN adapter Wi-Fi:
  Connection-specific DNS Suffix .:
  Link-local IPv6 Address . . . . : fe80::14e1:be78:a395:9669%11
  Default Gateway . . . . .
```

#### 9. ipconfig /release6 - Releases the IPv6 Address of All Network Adapters

The command is similar to ipconfig /release except it renews the IPv6 address on the adapters.



```
Select C:\Windows\system32\cmd.exe
                                                                                       C:\Users\ks834>ipconfig /release6
Windows IP Configuration
No operation can be performed on Local Area Connection while it has its media disconnected.
No operation can be performed on Ethernet while it has its media disconnected.
Unknown adapter Local Area Connection:
  Media State . . . . . . . . . : Media disconnected
  Connection-specific DNS Suffix .:
Ethernet adapter Ethernet:
  Media State . . . . . . . . . : Media disconnected
  Connection-specific DNS Suffix .:
Ethernet adapter Npcap Loopback Adapter:
  Connection-specific DNS Suffix .:
  Link-local IPv6 Address . . . . : fe80::f0b8:ff94:7803:80f7%7
  Autoconfiguration IPv4 Address. . : 169.254.128.247
  Subnet Mask . . . . . . . . . . . . . . . 255.255.0.0
  Default Gateway . . . . . . . . . . . . . . . . . .
Wireless LAN adapter Wi-Fi:
  Connection-specific DNS Suffix .:
  Link-local IPv6 Address . . . . : fe80::14e1:be78:a395:9669%11
  IPv4 Address. . . . . . . . . . : 192.168.104.108
```

#### 10. ipconfig /renew - Get a New IPv4 Address for All Network Adapters

The ipconfig /renew will cause your computer to reach out to your DHCP server for an IPv4 address if it doesn't already have one or renews an existing one for all network adapters. Depending on how your DHCP server is configured or the pool of available addresses, the IP address you will receive can be one you had previously or it can be a new IP address. Once you execute this command, it will typically take just seconds for a DHCP to assign your computer with an IP address. In the illustration below, the IP address assigned to this computer is 192.168.226.132.

To renew the IP address of your computer, type the following in the command window then press Enter: ipconfig /renew



```
C:\Users\ks834>ipconfig/renew
Windows IP Configuration
No operation can be performed on Local Area Conne<mark>c</mark>tion while it has its media disconnected.
No operation can be performed on Ethernet while it has its media disconnected.
An error occurred while renewing interface Npcap Loopback Adapter : unable to contact your DHCP server. Request has
Unknown adapter Local Area Connection:
                                        . . : Media disconnected
   Media State . .
   Ethernet adapter Ethernet:
   Media State . . . . . . . . . . : Media disconnected Connection-specific DNS Suffix . :
 thernet adapter Npcap Loopback Adapter:
   Connection-specific DNS Suffix .:
   Link-local IPv6 Address . . . : fe80::f0b8:ff94:7803:80f7%7
Autoconfiguration IPv4 Address . : 169.254.128.247
Subnet Mask . . . . . . . . . . . 255.255.0.0
   Default Gateway . . . . . . . :
 Vireless LAN adapter Wi-Fi:
   Connection-specific DNS Suffix .:
   Link-local IPv6 Address . . . : fe80::14e1:be78:a395:9669%11
IPv4 Address . . . . . : 192.168.1.13
   Subnet Mask . . . . . . . . . : 255.255.255.0
   Default Gateway . . . . . . . : fe80::1%11
                                               192.168.1.1
```

## 11. ipconfig /renew6 - Get a New IPv6 Address for All Network Adaptersipconfig /displaydns - View DNS Cache

The command is similar to ipconfig /renew except it renews the IPv6 address on the adapters.

## 12. ipconfig /renew <adapter> - Get a New IPv4 Address For a Specific Network Adapter

The ipconfig /renew <adapter> will cause your computer to reach out to your DHCP server for an IPv4 address if it doesn't already have one or renews an existing one for a **specific** network adapter. Depending on how your DHCP server is configured or the pool of available addresses, the IP address you will receive can be one you had previously or it can be a new IP address. Once you execute this command, it will typically take just seconds for a DHCP to assign your computer with an IP address. In the illustration below, the IP address assigned to the network adapter named "Wi-FI" is 192.168.226.132.

To renew the IP address for a network adapter on your computer named "Local Area Connection 3", type the following in the command window then press Enter: ipconfig/release \*Wi-FI\*. To find out the name(s) of the network adapters on your computer, type the following in the command window then press Enter: ipconfig



```
Command Prompt
C:\Users\ks834>ipconfig/release *Wi-FI*
Windows IP Configuration
Unknown adapter Local Area Connection:
  Media State . . . . . . . . . : Media disconnected
  Connection-specific DNS Suffix .:
Ethernet adapter Ethernet:
  Media State . . . . . . . . . : Media disconnected
  Connection-specific DNS Suffix .:
Ethernet adapter Npcap Loopback Adapter:
  Connection-specific DNS Suffix .:
  Link-local IPv6 Address . . . . : fe80::f0b8:ff94:7803:80f7%7
  Autoconfiguration IPv4 Address. . : 169.254.128.247
  Default Gateway . . . . . . . . :
Wireless LAN adapter Wi-Fi:
  Connection-specific DNS Suffix .:
  Link-local IPv6 Address . . . . : fe80::14e1:be78:a395:9669%11
  Default Gateway . . . . . . : fe80::1%11
```

## 13. ipconfig /all | findstr /v 00-00-00 | findstr Physical - Display MAC Address of Only Physical Connected Network Adapters

The ipconfig utility, with the /all switch, is often used to find the MAC address (the 6-byte 'burned-in' physical/hardware address) of network adapters. While this does the job, the output shows a plethora of information as mentioned above. If you have multiple adapters, the output can be lengthy making it cumbersome to find what you are looking for.

The Windows findstr utility is used to search for patterns of text. By feeding the output of ipconfig /all into findstr, we can significantly reduce the clutter and have the output show only the MAC address of physical network adapters. To accomplish this, type the following in the command window then press Enter:

ipconfig /all | findstr /v 00-00-00 | findstr Physical

This command is actually a series of three commands, namely:

- 1. ipconfig /all
- 2. findstr /v 00-00-00



#### 3. findstr Physical

The vertical bar (|), more commonly referred to as the pipe, is a 'command' that takes the output from the left side of the pipe and feeds it as input to the command on the right, bypassing the computer screen.

As the above command shows, the output of ipconfig /all is funneled into the command findstr /v 00-00-00 as its input. The findstr with the /v switch will look for lines of text in the output of ipconfig /all that does not contain 00-00-00. What this does is exclude any network adapters that are disabled or not connected. These network adapters will have MAC address that starts with 00-00-00.

The result from the first findstr will still contain a lot of information that we can further filter out, such as DHCP lease information. To further reduce clutter to ultimately end up with an output that lists only MAC address of physical adapters, we will need to funneled the output of the first findstr into a second findstr command. This second findster will filter out every line of text except those that has the word Physical.

This series of commands produce an output that is concise to show only the MAC address of connected network adapters. As the illustration below shows, this is a much more easier report to read as oppose to using just using ipconfig /all.

#### 14. ipconfig /displaydns - View DNS Cache

When you visit a website using it's domain name (e.g., www.meridianoutpost.com), your computer will need to know the IP address for that website in order for it to find it the server hosting it on the Internet. The process of identifying the IP address is called DNS lookup (analogous to looking up a number in a phone book). Once your computer learns the associated IP address for the website you want to visit, it will cache it (store it) on your computer. The purpose of caching it is to improve performance by not having your computer perform a DNS lookup each time you access a web page on the website.



This command will list all the currently cached IP addresses on your computer (also referred to as the DNS resolver cache). If you've accessed a lot of websites since turning on your computer, this list can be very lengthy. The illustration below shows just a few entries out of many for a particular computer. If you just turned on our computer and have not access websites or servers on the network on the Internet, then you list will only show a "localhost" setting in your local hosts file.

To display cached DNS entries on your computer, type the following in the command window then press Enter: ipconfig /displaydns

This command is typically used to troubleshoot specific DNS lookup issues. See example for ipconfig /flushdns for related information.

```
Command Prompt
                                                                X
C:>ipconfig /displaydns
Windows IP Configuration
   r4---sn-ab5szn7s.googlevideo.com
   Record Name . . . . : r4---sn-ab5szn7s.googlevideo.com
   Record Type . . . . : 5
   Time To Live . . . : 591
   Data Length . . . . . 8
   Section . . . . . : Answer
   CNAME Record . . . . : r4.sn-ab5szn7s.googlevideo.com
   Record Name . . . . : r4.sn-ab5szn7s.googlevideo.com
   Record Type . . . . : 1
   Time To Live . . . : 591
   Data Length . . . . . 4
   Section . . . . . : Answer
   A (Host) Record . . . : 74.125.172.58
   r4---sn-ab5szn7s.googlevideo.com
   Record Name . . . . : r4---sn-ab5szn7s.googlevideo.com
   Record Type . . . . : 5
   Time To Live . . . : 264
   Data Length . . . . . 8
   Section . . . . . . : Answer
   CNAME Record . . . . : r4.sn-ab5szn7s.googlevideo.com
   Record Name . . . . . : r4.sn-ab5szn7s.googlevideo.com
   Record Type . . . . : 28
   Time To Live . . . : 264
   Data Length . . . . : 16
   Section . . . . . : Answer
   AAAA Record . . . . : 2607:f8b0:401e:2e::a
```



#### 15. ipconfig /flushdns - Purge DNS Cache

This command will purge the cached DNS entries on your computer. You would typically do this to troubleshoot DNS related problems. An example of this is when you try to access a website but you encounter an error message stating the website is not found. For most people, executing this command does not have adverse effect on your computer. See example for ipconfig /displaydns for related information.

To delete all the cached DNS entries on your computer, type the following in the command window then press Enter: ipconfig /flushdns

Microsoft Windows [Version 10.0.19043.1165]
(c) Microsoft Corporation. All rights reserved.

C:\Users\ks834>ipconfig/flushdns

Windows IP Configuration

Successfully flushed the DNS Resolver Cache.

#### 16. Other Usages and Getting Help

The example usage described in the article shows only some of the functions available with ipconfig. To get a list of the available switches, type the following in the command window then press Enter: ipconfig /?



```
Command Prompt
                                                                                             X
C:>ipconfig /?
USAGE:
    ipconfig [/allcompartments] [/? | /all |
                                 /renew [adapter] | /release [adapter] |
                                 /renew6 [adapter] | /release6 [adapter] |
                                 /flushdns | /displaydns | /registerdns |
                                 /showclassid adapter
                                 /setclassid adapter [classid] |
                                 /showclassid6 adapter
                                 /setclassid6 adapter [classid] ]
where
    adapter
                        Connection name
                       (wildcard characters * and ? allowed, see examples)
   Options:
                       Display this help message
       /all
                        Display full configuration information.
       /release
                        Release the IPv4 address for the specified adapter.
                        Release the IPv6 address for the specified adapter.
       /release6
                        Renew the IPv4 address for the specified adapter.
       /renew
                        Renew the IPv6 address for the specified adapter.
       /renew6
       /flushdns
                        Purges the DNS Resolver cache.
       /registerdns
                       Refreshes all DHCP leases and re-registers DNS names
       /displaydns
                       Display the contents of the DNS Resolver Cache.
       /showclassid
                       Displays all the dhcp class IDs allowed for adapter.
       /setclassid
                       Modifies the dhcp class id.
                        Displays all the IPv6 DHCP class IDs allowed for adapter.
       /showclassid6
       /setclassid6
                        Modifies the IPv6 DHCP class id.
The default is to display only the IP address, subnet mask and
default gateway for each adapter bound to TCP/IP.
For Release and Renew, if no adapter name is specified, then the IP address
leases for all adapters bound to TCP/IP will be released or renewed.
For Setclassid and Setclassid6, if no ClassId is specified, then the ClassId is removed.
Examples:
    > ipconfig
                                     ... Show information
   > ipconfig /all
                                     ... Show detailed information
   > ipconfig /renew
                                     ... renew all adapters
    > ipconfig /renew EL*
                                     ... renew any connection that has its
                                         name starting with EL
                                     ... release all matching connections,
eg. "Wired Ethernet Connection 1" or
   > ipconfig /release *Con*
                                             "Wired Ethernet Connection 2"
    > ipconfig /allcompartments
                                     ... Show information about all
                                         compartments
    > ipconfig /allcompartments /all ... Show detailed information about all
                                         compartments
```



#### 17. Redirect Output to Text File

Instead of displaying the results on the screen, you can have the results saved automatically to a text file on your computer. To do this, simply use the ">" symbol followed by the folder path and file name of your choice. For example, to redirect the output of ipconfig /renew, type the following in the command window then press <a href="Enter: ipconfig/all >D:\ipconfig-results.txt">Enter: ipconfig /all >D:\ipconfig-results.txt</a>
This will create a file named **ipconfig-results.txt** in the folder path **c:\temp** that will have your result. You can then open this file with any text editor, such as *Notepad* on a Windows computer, as illustrated below.

ipconfig-results.txt - Notepad  File Edit Format View Help	-	×
Windows IP Configuration		
Host Name DESKTOP-6RKP050 Primary Dns Suffix		
Media State	V9	



#### 18. NS LookUp

Nslookup (stands for "Name Server Lookup") is a useful command for getting information from DNS server. It is a network administration tool for querying the Domain Name System (DNS) to obtain domain name or IP address mapping or any other specific DNS record. It is also used to troubleshoot DNS related problems.

#### Syntax:

nslookup [option]

nslookup google.com

```
C:\Users\ks834>nslookup
Default Server: csp1.zte.com.cn
Address: fe80::1

> www.google.com
Server: csp1.zte.com.cn
Address: fe80::1

Non-authoritative answer:
Name: www.google.com
Addresses: 2a00:1450:4019:80c::2004
172.217.19.164
```

nslookup 172.217.19.164:

#### Reverse DNS lookup

```
C:\Users\ks834>nslookup
Default Server: csp3.zte.com.cn
Address: fe80::1
> 172.217.19.164
Server: csp3.zte.com.cn
Address: fe80::1
Name: zrh04s07-in-f164.1e100.net
Address: 172.217.19.164
```



8 ways to find your IP address in Windows (all versions)

```
Ethernet
[nterfaceAlias
nterfaceIndex
                    : 5
InterfaceDescription : Intel(R) Ethernet Connection (2) I218-V
NetProfile.Name
                   : Network
Pv6Address
                    : 2a02:2f01:5060:9cb:bd77:20bb:62f9:50c0
[Pv4Address
                    : 192.168.1.31
                    : fe80::1eb7:2cff:fe74:fef8
[Pv6DefaultGateway
[Pv4DefaultGateway
                    : 192.168.1.1
                    : 2a02:2f01:5060:9cb::1
DNSServer
                      192.168.1.1
                      192.168.1.1
```

The IP address or Internet Protocol address is a numerical label that is used in networks to identify and locate network devices, from computers to smartphones, to printers and other devices. The IP address can be a useful piece of information, especially when you want to set up your home router or when you want to connect to other devices on a network. But how do you check a PC's IP address in Windows? In this tutorial, we will show you eight methods that work in Windows 10, Windows 7 and Windows 8.1:

NOTE: The information shared in this tutorial applies to all modern Windows operating systems: Windows 10, Windows 8.1 and Windows 7. To make things simpler, we use screenshots taken mostly in Windows 10. If you want to learn more technical details about IP addresses and their role in networking, we recommend you to read these articles:

## 1. How to find your IP address from the Command Prompt (all versions of Windows)

Open the Command Prompt, type the command ipconfig and press Enter. This command lists all the network adapters (both Ethernet and wireless) found on your Windows computer, and it shows details about each of them.



```
X
Command Prompt
                                                                         Microsoft Windows [Version 10.0.17025.1000]
(c) 2017 Microsoft Corporation. All rights reserved.
C:\Users\Digital Citizen>ipconfig
Windows IP Configuration
Ethernet adapter Ethernet0:
  Connection-specific DNS Suffix .:
  IPv6 Address. . . . . . . . . . . . . 2a02:2f01:5060:9cb:3499:3b63:e8ab:5967
  Temporary IPv6 Address. . . . . : 2a02:2f01:5060:9cb:e9d9:4dbb:4ddc:a934
  Link-local IPv6 Address . . . . : fe80::3499:3b63:e8ab:5967%4
  IPv4 Address. . . . . . . . . : 192.168.1.107
  Subnet Mask . . . . . . . . . : 255.255.255.0
  Default Gateway . . . . . . . : fe80::1eb7:2cff:fe74:fef8%4
                                      192.168.1.1
Tunnel adapter Teredo Tunneling Pseudo-Interface:
  Connection-specific DNS Suffix . :
  IPv6 Address. . . . . . . . . . . . . . . 2001:0:9d38:90d7:285a:3873:3f57:fe94
  Link-local IPv6 Address . . . . : fe80::285a:3873:3f57:fe94%13
  Default Gateway . . . . . . . :
C:\Users\Digital Citizen>_
```

Windows, IP address, IPv4, IPv6

For each network adapter, you get to see both the IPv4 address and the IPv6 Address.


Windows, IP address, IPv4, IPv6



To learn more about the parameters accepted by the ipconfig command and what each of them does, run the command ipconfig /?.

#### 2. How to find your IP address in the Settings app (Windows 10 only)


If you are using Windows 10, open the Settings app. There, go to Network & Internet. You are shown a list of networking related settings and categories. If you are connected to a wireless network, in the column on the left, choose Wi-Fi and then, on the right, click or tap on the name of the network that you are connected to.

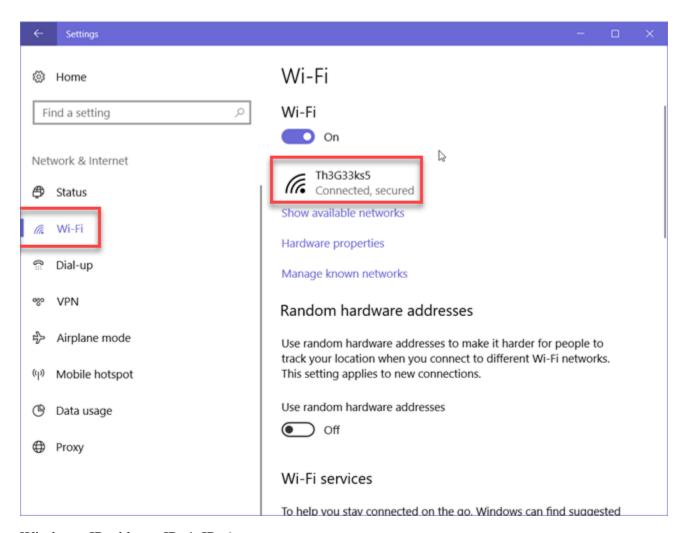

Windows, IP address, IPv4, IPv6

You are shown a long list of properties. Scroll down until you find the fields for the IPv6 and IPv4 addresses, highlighted below.




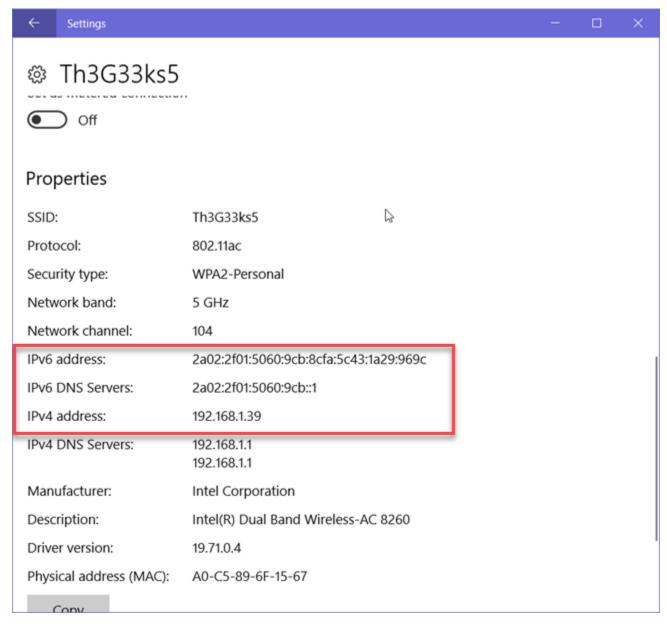

Windows, IP address, IPv4, IPv6

If you are connected using a network cable, in the column on the left choose Ethernet and then click or tap on the network name, on the right side of the screen.




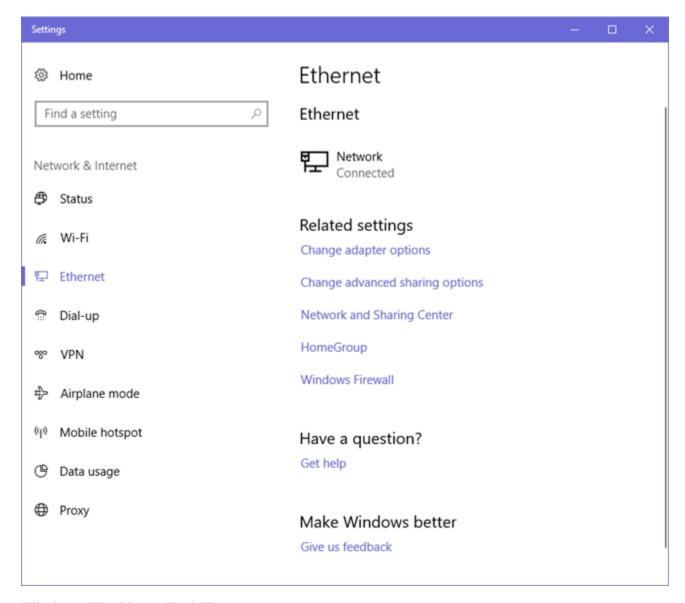

Windows, IP address, IPv4, IPv6

Scroll down the list of network properties until you find the entries for the IPv6 and IPv4 addresses, highlighted below.



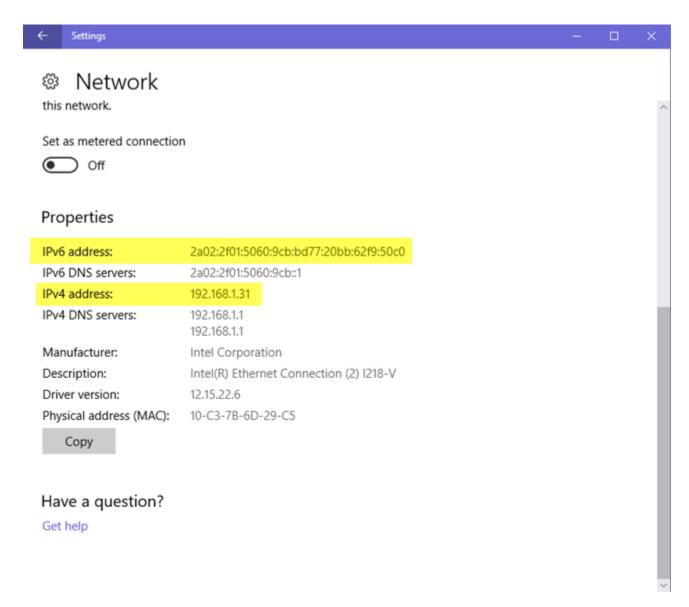


Windows, IP address, IPv4, IPv6

Now you can close the Settings app.

#### 3. How to find your IP Address in the Control Panel (all versions of Windows)

Another geeky method that does not involve using a command is to use the Network and Sharing Center. To access it, open the Control Panel and go to "Network and Internet -> Network and Sharing Center." Next, click or tap the "Change adapter settings" link on the left.




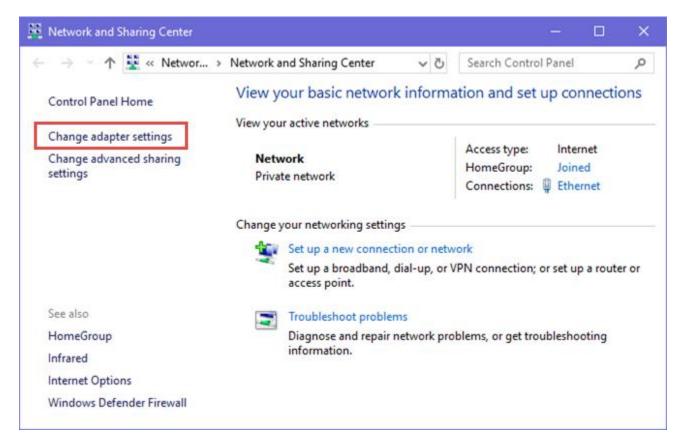

Windows, IP address, IPv4, IPv6

The Network Connections window is opened, listing the network adapters installed on your computer, including virtual ones, used by VPN services or virtualization apps. Double click (or double tap) the network adapter for which you want to see the IP address.




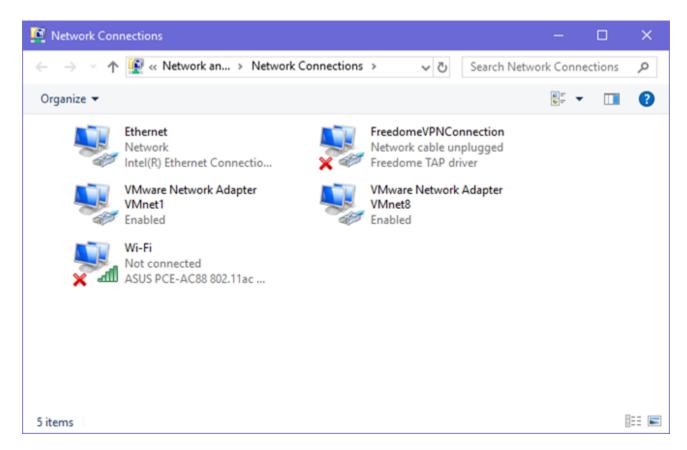

Windows, IP address, IPv4, IPv6

This action opens the Status window of that adapter. Click or tap the Details button to see a series of details about that network adapter, including its IPv4 and IPv6 addresses.




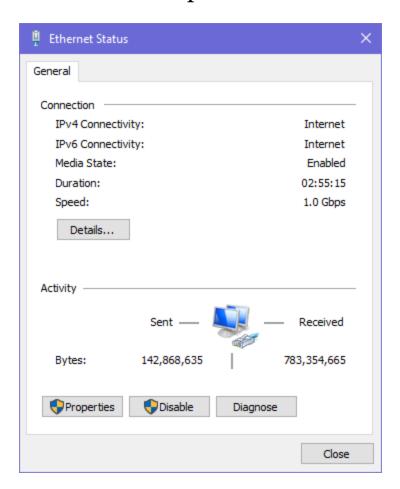

Windows, IP address, IPv4, IPv6

Scroll through the list of details until you find the IPv4 and IPv6 address fields, highlighted below.



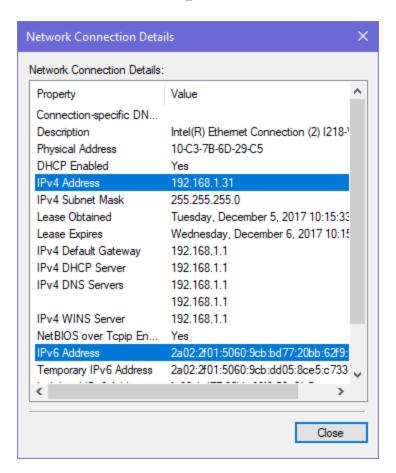


Windows, IP address, IPv4, IPv6

When done, Close the windows you just opened.

4. How to find your IP address in System Information (all versions of Windows) Another method that works in all versions of Windows is to use the System Information desktop app. You can open it by using search and typing "System Information" in the appropriate search field and clicking on the search result with the same name.



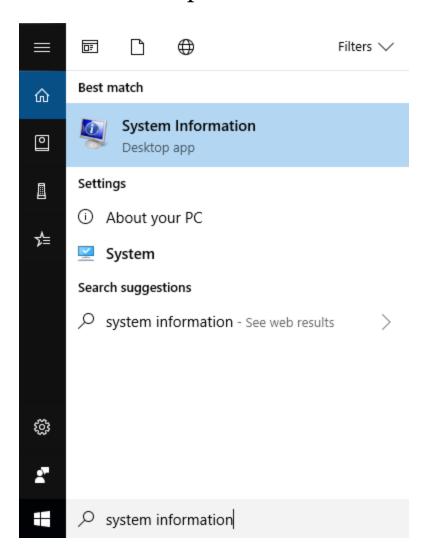

Windows, IP address, IPv4, IPv6

In the System Information desktop app, on the column on the left, expand Components followed by Networks and then Adapter. On the right side of the app window, you can see detailed information about each network adapter that is found on your computer. Scroll down the list until you find the network card that you are interested in. There you see a field named IP Address, giving you all the information you need.

Windows, IP address, IPv4, IPv6

Close the System Information app when done.

#### 5. How to find the IP address in PowerShell (all versions of Windows)

PowerShell is a tool similar to the Command Prompt, but it is even more powerful and allows you to work with more elements that make up Windows. PowerShell has two commands which you can use to find the IPv4 and IPv6 address of a network adapter. The first one is gip. Type it in PowerShell and then press Enter. The command triggers the display of several details about each network adapter, including their IP addresses.




Windows, IP address, IPv4, IPv6

Another command which returns the same results is Get-NetIPConfiguration. Type it, press Enter and then look for the information that you want. Windows, IP address, IPv4, IPv6

Close PowerShell when done.

## 6. How to find your IP address in Task Manager (Windows 10 and Windows 8.1 only)


If you use Windows 10 or Windows 8.1, start the Task Manager. If it starts in the compact view that only displays open apps, click or tap "More details." Next, select the Performance tab and look for your network card. If you are connected to a wireless network, click or tap Wi-Fi. On the right side, you can see the IPv6 and IPv4 addresses.

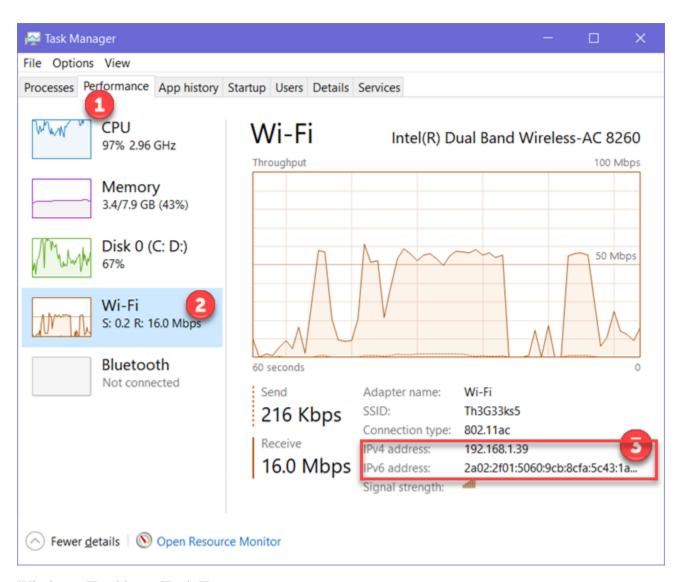

Windows, IP address, IPv4, IPv6



If you are connected to a wired network, choose Ethernet on the left side of the Performance tab. On the right side look for the IPv6 and IPv4 addresses.

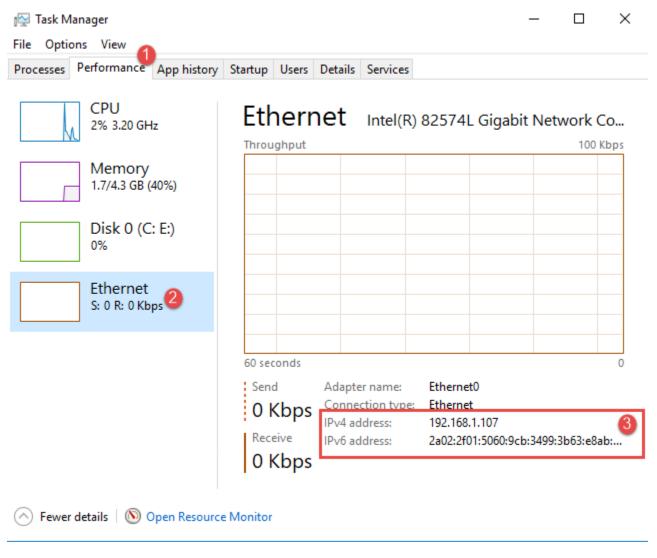


Windows, IP address, IPv4, IPv6

Close Task Manager when done.

## 7. How to find your computer's IP address using the Network Map (Windows 7 only)

Windows 7 has a unique feature that is not available in Windows 8.1 or Windows 10. It is called the Network Map, and it shares a visual map of your network. First, open the Network and Sharing Center. On the top right of the window, there is a link called "See full map." Click on it.




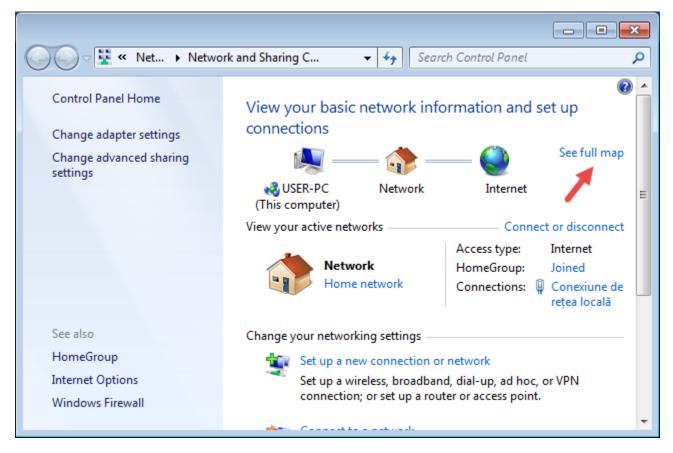

Windows, IP address, IPv4, IPv6

This opens the Network Map. If you hover with the mouse over your computer, networking related information will be displayed, including the IPv4 and IPv6 address.



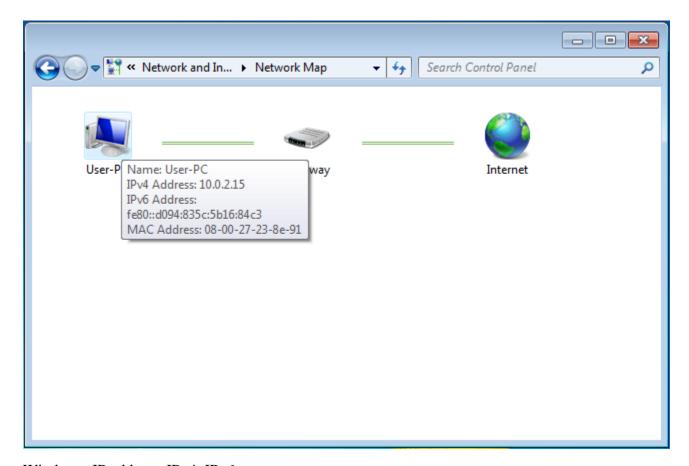


Windows, IP address, IPv4, IPv6

Write it down and close the Network Map.

#### 8. How to find your IP address in the PC Settings app (Windows 8.1 only)

If you are using Windows 8.1, open the PC Settings app. There, choose Network and then go to Connections. Here you can see the network adapter that you are using the name of the network that you are connected to. Click or tap on the network name, under Ethernet (if you are on a wired connection) or Wi-Fi (if you are using a wireless network).



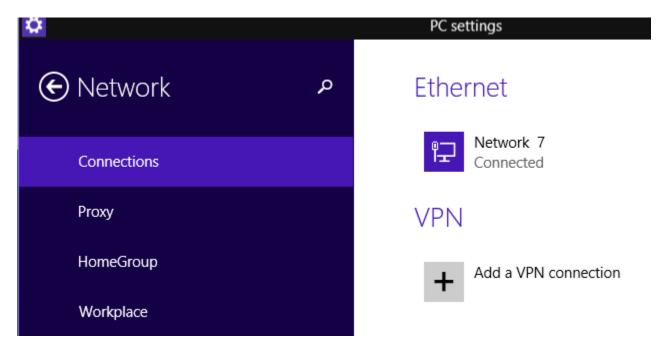

Windows, IP address, IPv4, IPv6

You are shown the properties of your connection, including the IP address.





## Find devices and content

Find PCs, devices and content on this network and automatically connect to devices like printers and TVs. Turn this off for public networks to help keep your stuff safe.

On



## **Properties**

IPv6 address: 2a02:2f01:5060:9cb:f484:a290:9c33:3d13

IPv6 DNS Servers: 2a02:2f01:5060:9cb::1

IPv4 address: 192.168.1.183

IPv4 DNS Servers: 192.168.1.1

192.168.1.1

Manufacturer: Intel Corporation

Description: Intel(R) 82574L Gigabit Network Connection

Driver version: 12.6.47.1

Physical address: 00-0C-29-08-C5-97

Copy

Windows, IP address, IPv4, IPv6

Close PC Settings when done